
Perfect Waves - ELIZA, MATILDA & SUNSET



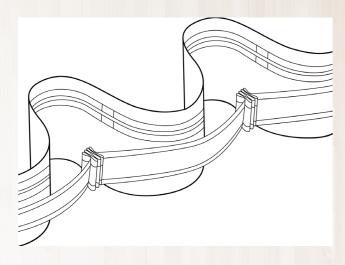

These unique tapes create perfect waves for curtains and drapes both in track and pole systems.



Order through our Webshop - easy and convenient!

www.bandex.com

- In our Onlineshop at www.bandex.com you can find all product information and order online directly.
- SCHOWROOM -NEW-

Visit our virtual showroom and explore new and proved oneself products. Be fascinated from this new format.

- In our Download area you can find helpful instructions and hints.
- If you are not sure about the right tape just use our curtain tape configurator for quick help.
- Surf our Homepage it's worthwhile!



PERMANENT PROVEN QUALITY!

BANDEX is fully integrated for the majority of it's production: with processes such as warping, weaving, knitting, finishing and making-up carried out in-house.

As leading curtain tape manufacturer we pay special attention to:

Quality "made in Austria"!

Overview BANDEX product assortment

- Curtain tapes
- Decorative Accessories (Tiebacks, magnets etc.)
- Accessories
 (Weightings, curtain rods, mushroom- and velourstapes, deco-rings etc.)

SEWING GUIDE ELIZA, MATILDA & SUNSET

Bandex Textil & Handels-GmbH Herrschaftswiesen 17 A-6842 Koblach

T +43 5523 90 304-0 F +43 5523 90 304-70 info@bandex.com



oandex

SEWING GUIDE ELIZA, MATILDA & SUNSET

For calculating the width of a flat curtain; Examples for a curtain of a width of 240 cm when pleated:

MEASURING ELIZA & MATILDA:

- 1:1.5 / Pleat repeat 18,7 cm
 240 cm x fullness 1.50 = 360 cm
 360 cm : Pleat repeat 18,7 cm = 19,25 = rounded 20
 20 repeats x repeat 18,7 cm = 374 cm (+ seams)
 Fabric width unpleated = 374 cm (no seams calculated)
 Depth of the pleat: 80 mm (50 mm front, 30 mm backside)
- 1:1.8 / Pleat repeat 23 cm
 240 cm x fullness 1.80 = 432 cm
 432 cm : Pleat repeat 23 cm = 18,78 = rounded 19
 19 repeats x repeat 23 cm = 437 cm (+ seams)
 Fabric width unpleated = 437 cm (no seams calculated)
 Depth of the pleat: 100 mm (55 mm front, 45 mm backside)
- 1:2.0 / Pleat repeat 11,5 cm (MINIWAVE)
 240 cm x fullness 2.00 = 480 cm
 480 cm : Pleat repeat 11,5 cm = 41,74 = rounded 42
 42 repeats x repeat 11,5 cm = 483 cm (+ seams)
 Fabric width unpleated = 483 cm (no seams calculated)
 Depth of the pleat: 40 mm (40 mm front, 0 mm backside)
- 240 cm x fullness 2.00 = 480 cm
 480 cm : Pleat repeat 14 cm = 34,28 = rounded 35
 35 repeats x repeat 14 cm = 490 cm (+ seams)
 Fabric width unpleated = 490 cm (no seams calculated)

 Depth of the pleat: 60 mm (35 mm front, 25 mm backside)

1:2.0 / Pleat repeat 14 cm (MINIWAVE)

SEWING GUIDE ELIZA, MATILDA & SUNSET

1:2.0 / Pleat repeat 21 cm
240 cm x fullness 2.00 = 480 cm
480 cm : Pleat repeat 21 cm = 22,85 = rounded 23
23 repeats x repeat 21 cm = 483 cm (+ seams)
Fabric width unpleated = 483 cm (no seams calculated)
Depth of the pleat: 75 mm (45 mm front, 30 mm backside)

MEASURING SUNSET:

1:1.5 / Pleat repeat 15 cm

240 cm x fullness 1.50 = 360 cm 360 cm : Pleat repeat 15 cm = 24 24 repeats x repeat 15 cm = 360 cm (+ seams) Fabric width unpleated = 360 cm (no seams calculated) **Depth of the pleat:** 40 mm (25 mm front, 15 mm backside)

1:2.0 / Pleat repeat 17,5 cm
240 cm x fullness 2.00 = 480 cm
480 cm : Pleat repeat 17,5 cm = 27,42 = rounded 28
28 repeats x repeat 17,5 cm = 490 cm (+ seams)
Fabric width unpleated = 490 cm (no seams calculated)
Depth of the pleat: 70 mm (40 mm front, 30 mm backside)

MEASURING ELIZA & MATILDA & SUNSET:

1:2.5 / Pleat repeat 22 cm
 240 cm x fullness 2.50 = 600 cm
 600 cm : Pleat repeat 22 cm = 27,27 = rounded 28
 28 repeats x repeat 22 cm = 616 cm (+ seams)
 Fabric width unpleated = 616 cm (no seams calculated)
 Depth of the pleat: 95 mm (55 mm front, 40mm backside)

SEWING GUIDE ELIZA, MATILDA & SUNSET

- Take the measurements and cut the fabric
- Choose the correct colour of the yarn for stitching
- Sew the seams





- Cut the curtain tape (fold in the middle of the woven part)
- Pull the draw cords



• Sew the curtain tape ELIZA with 2 stitch lines



SEWING GUIDE ELIZA, MATILDA & SUNSET

- Fix the hooks in the pockets (Please note the right positioning)
- Pleat the curtain tape



Knot the draw cords



Fix the curtain into the curtain track or rail



It's important that the curtain doesn't touch the track. You can get optimized waves when using weighting-bars or curtain-weight-tape within the seam of the curtain.

USEFUL HINT: Use our helpful fabric amount calculator either as an App on your cellphone or at our Homepage **www.bandex.com**